

 
A new built-in Network Adaptor that allows you to control your heatpump from everywhere.

Flexibility to connect Single Split System or Multi Split System Air Conditioner to suit your needs.

For complete product features, please refer to catalogue.


Use remote control within 8 m from the remote control receiver of the indoor unit.

\* Remote control display and functions may vary depending on the model.

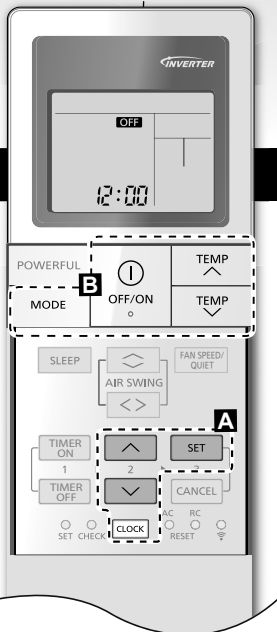

## Quick Guide

### Inserting the batteries

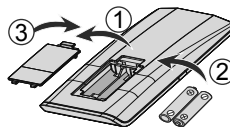

- ① Pull out the back cover of remote control.
- ② Insert AAA or R03 batteries.
- ③ Close the cover.

### Ⓐ Clock setting



- ① Press **CLOCK** and set the time **↑** **↓**.
  - Press **CLOCK** and hold for approximately 5 seconds to show time in 12-hour (am/pm) or 24 hour indication.
- ② **Confirm** **SET**.

Thank you for purchasing  
Panasonic Air Conditioner.

## Table of contents

Safety precautions.....	4-15
How to use.....	16-17
To learn more.....	18-19
Cleaning instructions.....	20
Troubleshooting.....	21-23
Information.....	24-25


### Accessories

- Remote control
- AAA or R03 batteries × 2
- Remote control holder
- Screws for remote control holder × 2


The illustrations in this manual are for explanation purposes only and may differ from the actual unit. They are subject to change without notice for future improvement.


## Basic operation

- ① Press  to start/stop the operation.

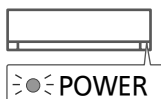


- Please note that the **OFF** indication is on display to start the unit.

 
- ② Press  to select the desired mode.




- ③ Select the desired temperature.

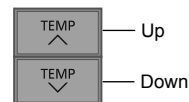

Selection range:  
16.0 °C ~ 30.0 °C /  
60 °F ~ 86 °F.

- Press and hold  for approximately 10 seconds to switch the temperature indication in °C or °F.


# How to use

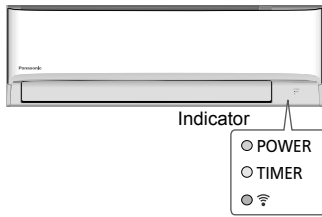

**CS-TZ20/25/35/42/50WKEW**  
**CS-RZ20/25/35/50WKEW**  
**CS-MTZ16WKE**



**CS-TZ60/71WKEW**

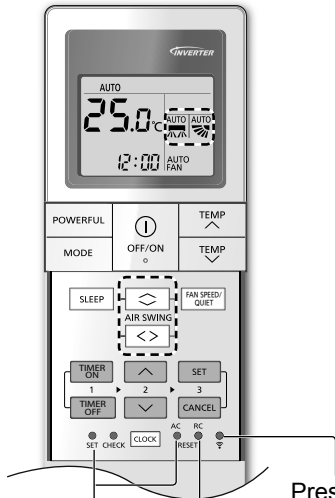

Not used in normal operations.

Press to restore the remote control to default setting.

Press to ON/ OFF Wireless LAN features.

## To adjust airflow direction

(CS-TZ20/25/35/42/50WKEW, CS-RZ20/25/35/50WKEW, CS-MTZ16WKE)



### Upper direction:

- Do not adjust the flap by hand.


### Lateral direction:

- For lateral direction, it is manually adjustable as shown.



## To adjust airflow direction

(CS-TZ60/71WKEW)

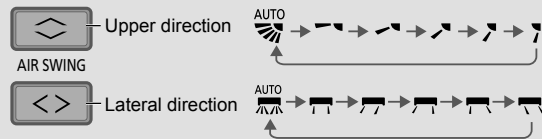

- Do not adjust the flap by hand.

## To adjust FAN SPEED and QUIET condition



### FAN SPEED:

- For AUTO, the indoor fan speed is automatically adjusted according to the operation mode.

### QUIET:

- This operation reduces airflow noise.

## To reach set temperature quickly



- This operation stops automatically after 20 minutes.