


Before using the dishwasher, read the user instructions!

ADP 8557

Quick Reference Guide

GB

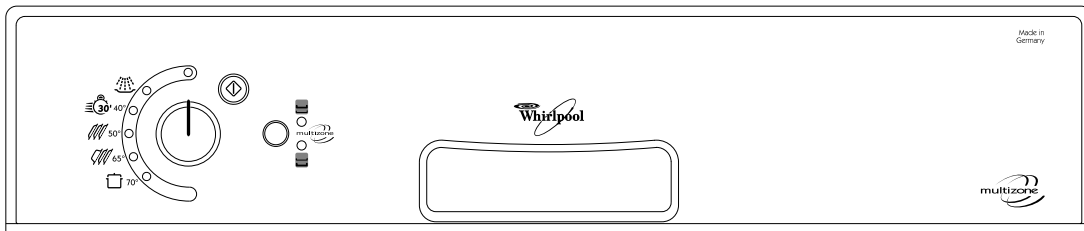

Program selector knob
Mains On / Off



Start button
Switches "on" when the dishwasher is operating. Flashes when a fault occurs. Switches off at the end of the programme.

Options



"Half load - Multizone" button
Load the upper or lower rack only. This function can be used with any programme.
Press once = upper rack (the indicator lamp comes on)
Press twice = lower rack (the indicator lamp comes on)
Press 3 times = Off (half load function deactivated).

Programme chart			Detergent ²⁾		Consumption ³⁾		
Programmes		Loading instructions	A	B	Litres	kWh	Minutes
Pre-Rinse	cold	Crockery to be washed later.	-	-	7.0	0.03	14
Quickwash	40 °C	Lightly soiled crockery with no dried-on food.	X	-	13.0	0.65	30
Normal ¹⁾	50 °C	Normally or heavily soiled crockery.	X	X	16.0	1.24	128
Normal	65 °C	Normally or heavily soiled crockery.	X	X	16.0	1.45	90
Intensive	70 °C	Recommended programme for heavily soiled crockery, especially suitable for pans and saucepans.	X	X	17.0	1.70	140

1) Reference programme for energy label in compliance with EN 50242 regulations;
2) Refer to "User instructions";

3) Program data obtained in conformity with European standard EN 50242. Values may vary in relation to usage, e.g.: different loads, water temperatures - above or below 15 °C - as well as water hardness and power supply voltage, etc.

Important information for Test Laboratories:
For detailed information on the EN/Standard loading comparison test, contact the following address:
"nk_customer@email.whirlpool.com".

How to use the appliance


Further indications are given in the single chapters and in the user instructions.

Switch on the appliance

Automatic start by turning the programme selector knob (in case of retractable knob, first press the knob to access it).

How to fill the detergent

Large compartment A:
With each wash cycle.
Small compartment B:
For programmes with pre-wash only.

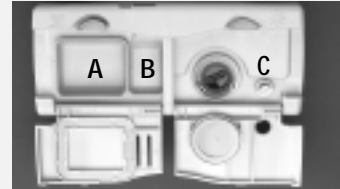

Check the rinse aid level

Mechanical indicator lamp C.
Electric indicator on control panel (if provided).

Check the regeneration salt level

On models with water softener system only.
Mechanical indicator lamp D. Electric indicator on control panel (if provided).



Load the racks

Refer to the dishwasher loading instructions.

Close the dishwasher door, turn on the water tap

Select a programme

Select the desired programme.
The corresponding indicator lamp comes on.

Select options

If necessary (and if provided) the corresponding indicator lamp lights up.

Press the Start button

The selected programme is then memorised (even in the event of power failure).

"Change programme"

- Press the START button for 2 sec. until the Start indicator lamp switches off;
- Select another programme and press the START button again.

Wash cycle

- Only open the dishwasher if necessary (Warning: beware of hot steam).
- If the appliance is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted.

Switch off the appliance

Only after the START button has switched off: Access the knob (in case of retractable knob, press and then release the knob).

Turn off the water tap, unload the racks

Warning: when the door is opened steam comes out!
Unload the appliance, starting from the lower rack.

Dishwasher loading instructions and racks provided

Upper rack:

depending on the model

Multi-purpose support (A): ¹⁾


Depending on the position, for long-handles utensils, cups and glasses. May be used in three different positions.

Crockery holders (B):

Depending on the position, for example plates, cups and long-stemmed glasses.

Revolving glass support (C): ²⁾


Depending on the position, for example small or long-stemmed glasses.

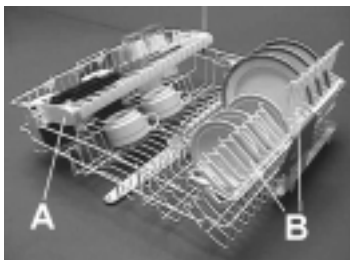

Half Load:

Load the upper rack **only**.


Place the cutlery basket (D) in the upper rack.

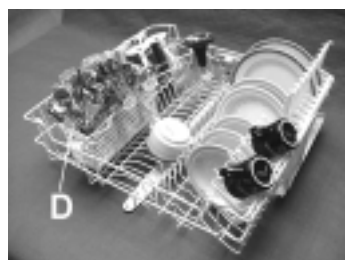

Rack height adjustment (also when loaded):

- **Lower adjustment:** pull out the two rack handles outwards (E) and lower the rack.
- **Upper adjustment:** pull the two handles (E) upwards until the rack clicks into place (Factory setting).

The rack must be level on both sides.

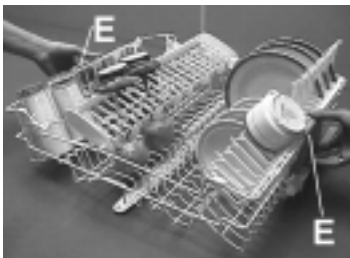



Lower rack:

Depending on the model with fixed or tilting plate holders (F).

Half Load:

Load the lower rack **only**.

Greater washing power, particularly for plates and saucepans.

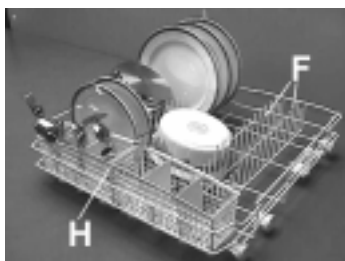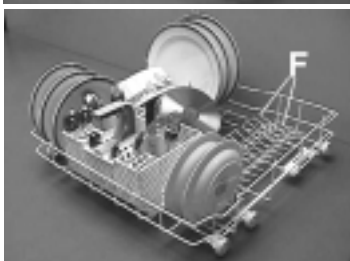

Cutlery basket (G) or (H):




Some models are provided with a grid (I) that can be fitted onto the cutlery basket to keep items separated. Cutlery basket (D) for appliances with half load only. Sharp knives and forks that might cause injury must be placed in the cutlery basket with the handles positioned upwards.

Only use dishwasher-proof crockery and dishes. Do not use the appliance for items not suitable for washing in a dishwasher, for example wooden items, aluminium, plastic utensils, tin, hand-decorated crockery (unglazed), silver cutlery.

Spare parts which are sold separately:

¹⁾ Multi-purpose support (A) - N. AMH 369 series.

²⁾ Revolving glass support (C) - N. WGH 1000 series.

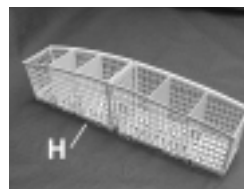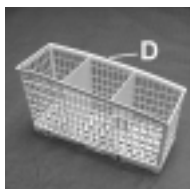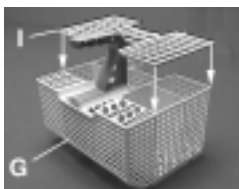

What to do if...

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem (* see also the corresponding chapter in the user instructions).

Problem	Cause	Remedy
The appliance is not working	<ul style="list-style-type: none"> • No water supply. • The appliance does not load sufficient water. • There is a power failure. • Starting the selected programme. 	<ul style="list-style-type: none"> • Open the tap. • Clean the water supply tap filter. • Ensure there are no kinks in the water hose. • Insert the plug into the mains socket. • Press the Start button. • Close the door. • Check the domestic circuit fuse. • The programme can be set to "0" to start.
If crockery is not perfectly dry	<ul style="list-style-type: none"> • Insufficient rinse aid. • Residual water in cavities. 	<ul style="list-style-type: none"> • Increase dosage *. • Load crockery at an angle.
If crockery is not perfectly clean	<ul style="list-style-type: none"> • The water jet does not reach the crockery. • Insufficient detergent. • Unsuitable programme. • Spray arms blocked. • Spray arm nozzles clogged. • Incorrect detergent/detergent too old. 	<ul style="list-style-type: none"> • Arrange crockery so that items do not touch each other. Load crockery upside down. • Follow recommended detergent dosage. • Select a more intense wash cycle. • The spray arms must be able to turn freely. • Remove any impurities obstructing the water flow *. • Use a good quality detergent.
Sandy or grainy residues	<ul style="list-style-type: none"> • Clogged filters. • Filters incorrectly assembled. 	<ul style="list-style-type: none"> • Check filters regularly/if necessary clean *. • Insert the filter correctly *.
Colour of plastic parts faded	<ul style="list-style-type: none"> • Tomato/carrot juice,... 	<ul style="list-style-type: none"> • Depending on the material, if necessary use a detergent with a greater whitening power.
Deposits on crockery	<ul style="list-style-type: none"> • Streaks on the crockery/glasses. • Streaks on glasses. • Layer of salt on crockery/glasses. • Insufficient water softening, calcium deposits. 	<ul style="list-style-type: none"> • Increase the rinse aid dosage *. • Reduce the rinse aid dosage *. • Close the salt container lid properly *. • Change water hardness setting, if necessary add salt *.
Opaque glasses/ glasses not sparkling	<ul style="list-style-type: none"> • Cannot be washed in the dishwasher. 	<ul style="list-style-type: none"> • Use suitable glasses.
Rust on cutlery	<ul style="list-style-type: none"> • Not made of stainless steel. 	<ul style="list-style-type: none"> • Use suitable cutlery.
Identifying appliance faults	<ul style="list-style-type: none"> • The START indicator lamp flashes. • Indicator F... (if provided). 	<ul style="list-style-type: none"> • Ensure that the filter assembly is not clogged and if necessary clean it *. Start the programme again. Press the Start button for 2 seconds, until the Start indicator lamp switches off. Select a new programme and press the Start button again. • Call the After-Sales Service.

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee).

Before contacting our After-Sales Service, take note of the following:

- The nature of the fault.
- The appliance type and model.
- The service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side.

